


NITROX LP CONNECTION TO HP COMPRESSOR

IT IS VERY SIMPLE TO CONNECT A LOW PRESSURE COMPRESSOR SUPPLYING NITROX MIX TO A HIGH PRESSURE COMPRESSOR BY AEROTECHNICA COLTRI




1
CONNECT THE OUTLET TUBE OF NITROX MIX FROM THE LP COMPRESSOR TO THE HP COMPRESSOR

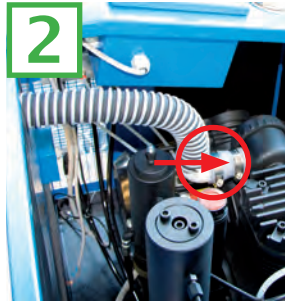

2
INSERT THE CONNECTION TUBE TO THE SUCTION FILTER OF THE HIGH PRESSURE COMPRESSOR



3
START THE LP COMPRESSOR

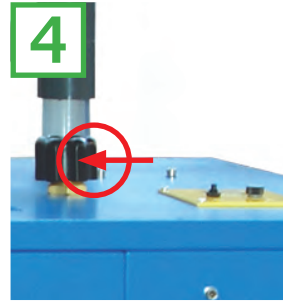

4
SET O₂ PERCENTAGE WITH YELLOW ANALYZER



5
START THE HP COMPRESSOR



6
CHECK O₂ PERCENTAGE WITH PRO O₂ ANALYZER LOCATED ON THE HIGH PRESSURE COMPRESSOR

